

User Manual

ACK05 Wireless Shortcut Remote

Contents

Introduction	1
Product Overview	2
Included with Your Product	3
Connection	4
Compatibility	6
Product Settings	6
Driver Installation	6
Introduction to Driver	8
Application	9
Roller	9
Import/Store	10
Shortcut Keys	11
Settings	14
Driver Uninstallation	15

Introduction




Thank you for choosing XPPen ACK05 Wireless Shortcut Remote. This user manual is specially designed to detail the product's functions and features. Please read this manual before using the product to ensure safe and proper

use.

Due to the latest product improvements, content may differ from the final product and is subject to change without prior notice.

Note: The pictures in the User Manual are for reference only. The User Manual supplied with the device may vary depending on the model.

Product Overview

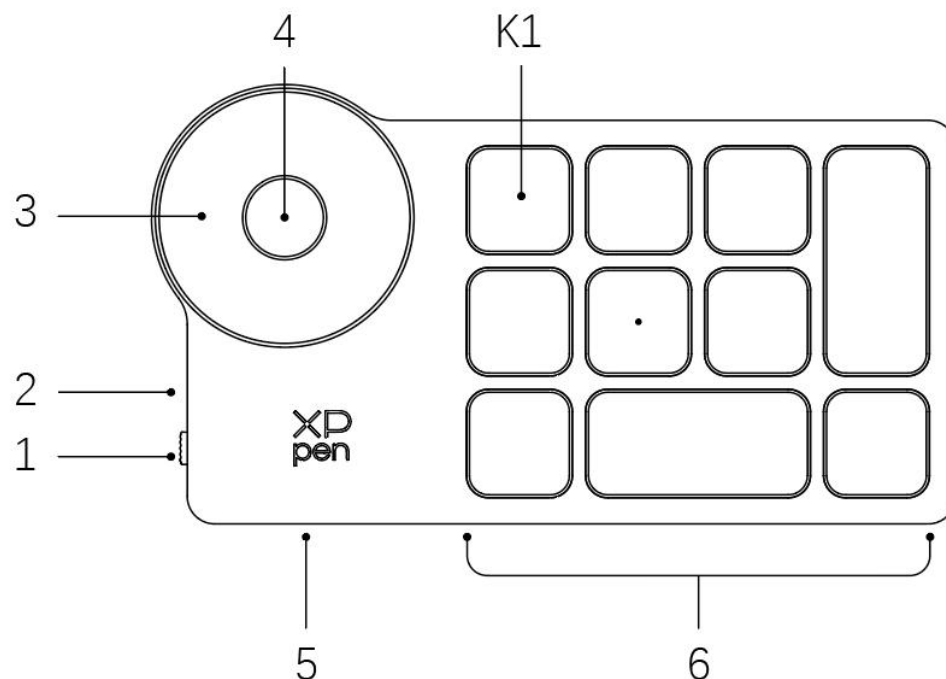

1. Power Slide Switch

2. Indicator light

In blue status:

- a. Flashing slowly: No Bluetooth connected
- b. Flashing quickly: Waiting for Bluetooth pairing
- c. Always on: Successfully paired (Always on for 30 seconds and then off)

In red status:

- a. Flashing: Low battery ($\leq 20\%$)
- b. Always on: Charging
- c. Off: Fully charged

A purple color indicates that the red and the blue indicator are both On simultaneously

3. Roller


4. Roller switch

5. USB-C Port

6. Shortcut Key Group

4 customizable groups of 10 keys per application for a total of 40 shortcut keys. You can disable sets if they are not needed.

Group One is enabled by default, and K1 is the toggle key. Click to switch between Group.

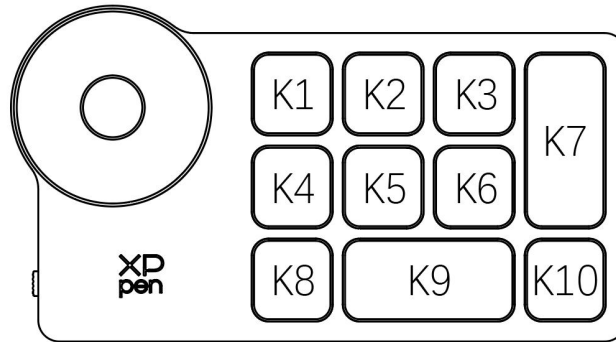

Default Key settings without the driver:


K1-Ctrl+O
 K2-Ctrl+N
 K3-F5
 K4-Shift
 K5-Ctrl
 K6-Alt
 K7-Ctrl+S
 K8-Ctrl+Z
 K9-Space
 K10-Ctrl+Shift+Z

Default Key settings with the driver installed:

K1-Key group switching
 K2-Set preview
 K3-F5
 K4-Shift
 K5-Ctrl
 K6-Alt
 K7-Ctrl+S
 K8-Ctrl+Z
 K9-Space
 K10-Ctrl+Shift+Z

* All descriptions and pictures shown are for reference only and may differ from the actual products.

Included with your product

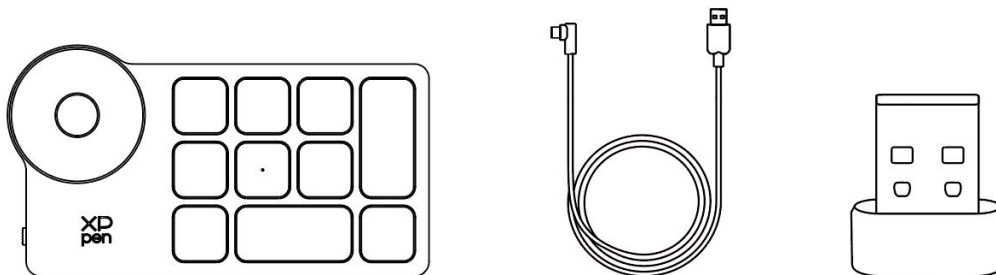


Wireless Shortcut Remote、USB-C to USB-A cable、Bluetooth receiver

* The list is for illustrative purposes only. Please refer to the actual product.

Connection

Wired Connection


Connect Wireless Shortcut Remote to your computer Using USB-C to USB-A cable.

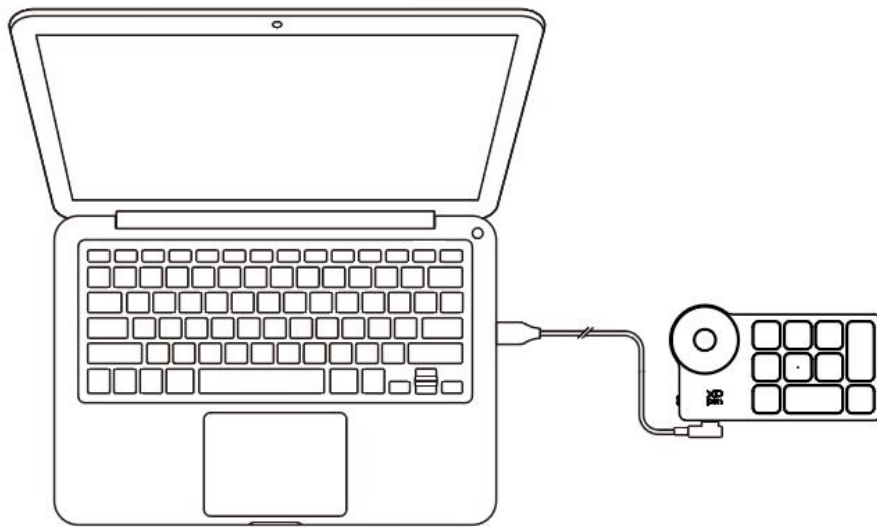

Wireless Connection

A. Connection to the Bluetooth receiver


Plug the Bluetooth receiver into the computer and slide the power switch, with the indicator light always on in blue. The blue indicator will be off after 30 seconds.

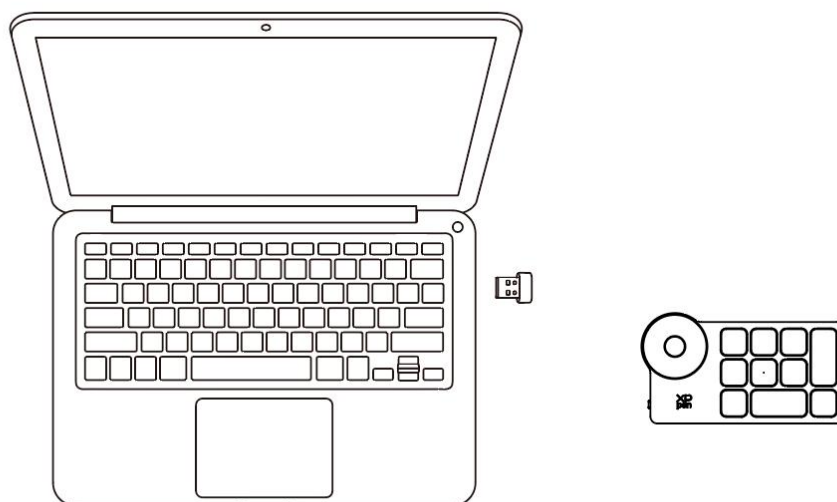

*If the Bluetooth receiver needs to re-pair with the device, please download the wireless pairing tool from the official website of XPPen (<https://www.xp-pen.com>) according to the product model, and refer to the operation guide for pairing connection.

B. Direct Bluetooth connection

1. Slide the power switch and the blue indicator light flashes slowly. Then long press the K1 shortcut key for 3 seconds to enter Bluetooth pairing and the blue indicator light flashes quickly.
2. Turn on the Bluetooth on the computer, add Bluetooth device, search for device name "Shortcut Remote" and complete Bluetooth pairing by clicking the device name "Shortcut Remote", with the blue indicator always on. The indicator will be off after 30 seconds.
3. Slide the power switch again to turn off the device.

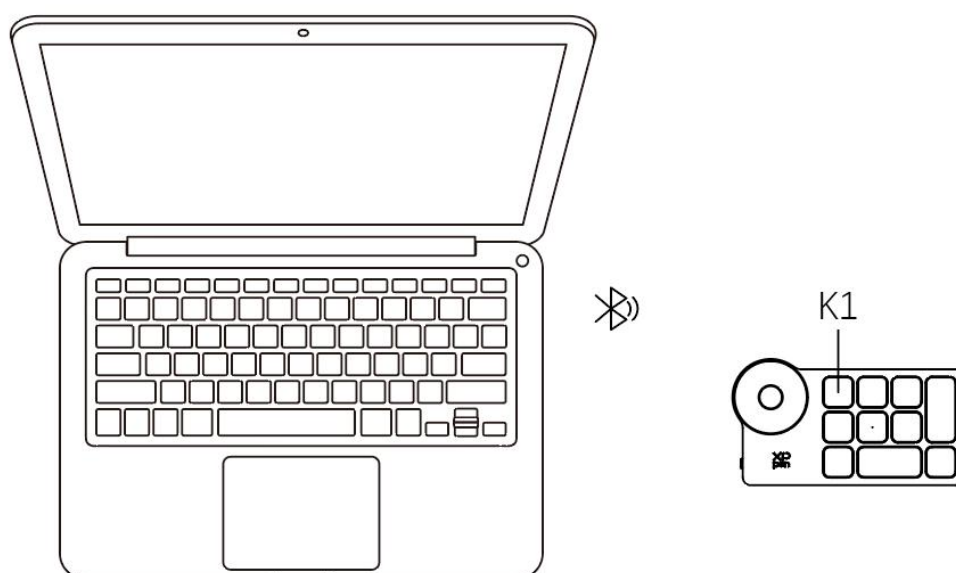

Compatibility

Bluetooth receiver or wired connections:
Windows 7 (or later), Mac OS X 10.10 (or later), Linux.

Direct Bluetooth connection:
Windows 10 (or later), Mac OS X 10.10 (or later).

Product Settings

Driver installation

To get the device's full benefits, we strongly recommend you to download and install the driver.

Please download the latest driver suitable for your product model from XPPen website (<https://www.xp-pen.com>).

Notes:

1. Before installation, please close all opened antivirus software and graphics software.
2. Choose the right driver version that works for you:
 - a. Full version: compatible with XPPen drawing tablet and drawing display products as well as the Shortcut Remote. Please uninstall drivers (if any) for other drawing displays/tablets before the installation;
 - b. Separated version: supports Shortcut Remote only, you can use other brand products with this version.
3. Restart your computer after the installation is completed.
4. For the best performance of your device, we highly recommend you to use the latest driver.

Windows:


Unzip file. Run the "exe" file as administrator, and follow the prompts to complete the installation.

Mac:

Unzip file. Run the "dmg" file, complete the installation according to the prompts, and then add the required security settings (System Preferences > Security & Privacy > Accessibility & Bluetooth), please ensure that the PenTable_Driver has been selected, otherwise, the device and driver will not work properly.



If there is no PenTable_Driver on the list, go to Library -> Application Support -> PenDriver to add the driver manually.

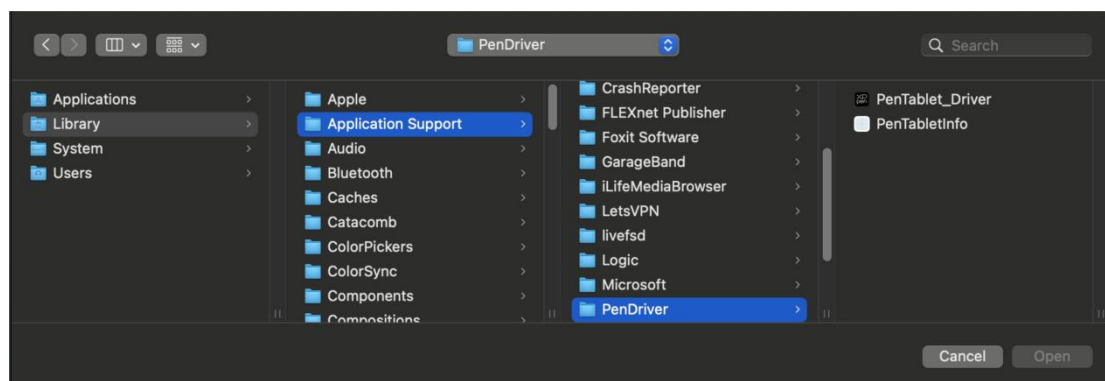

Linux:


Deb: Open the terminal window, enter "sudo dpkg -i" and execute the command after dragging the installation file into it;

Rpm: Open the terminal window, enter "sudo rpm -i" and execute the command after dragging the installation file into it;


Tar.gz: Unzip it first, then enter "sudo" in the terminal window, drag "install.sh" into it, and then execute the command.

Introduction to driver

If the device is not connected or the connection fails, you can see the following prompt. In this case, try to restart your computer or the driver, or contact our service staff for support.

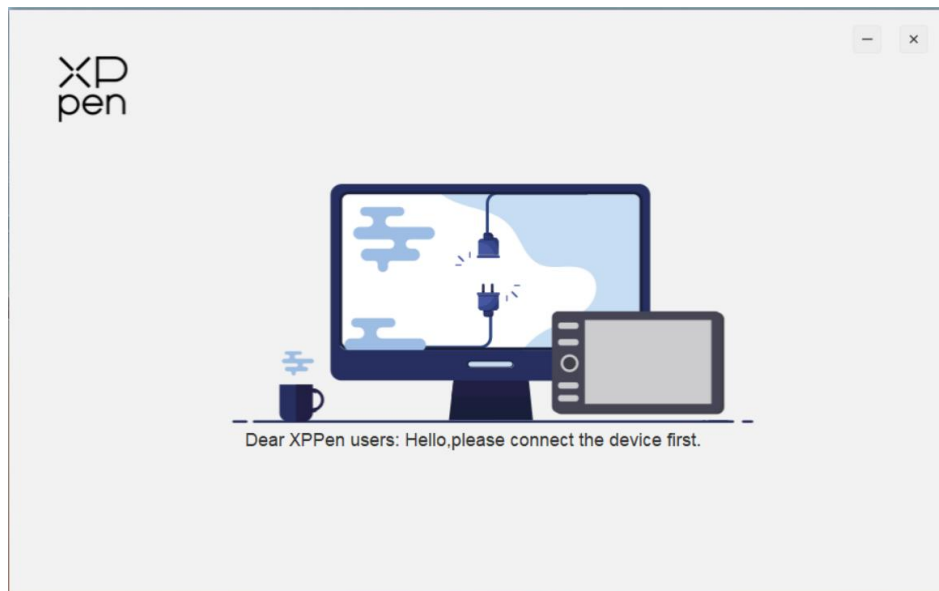

If the device is successfully connected to the computer, the device's picture will

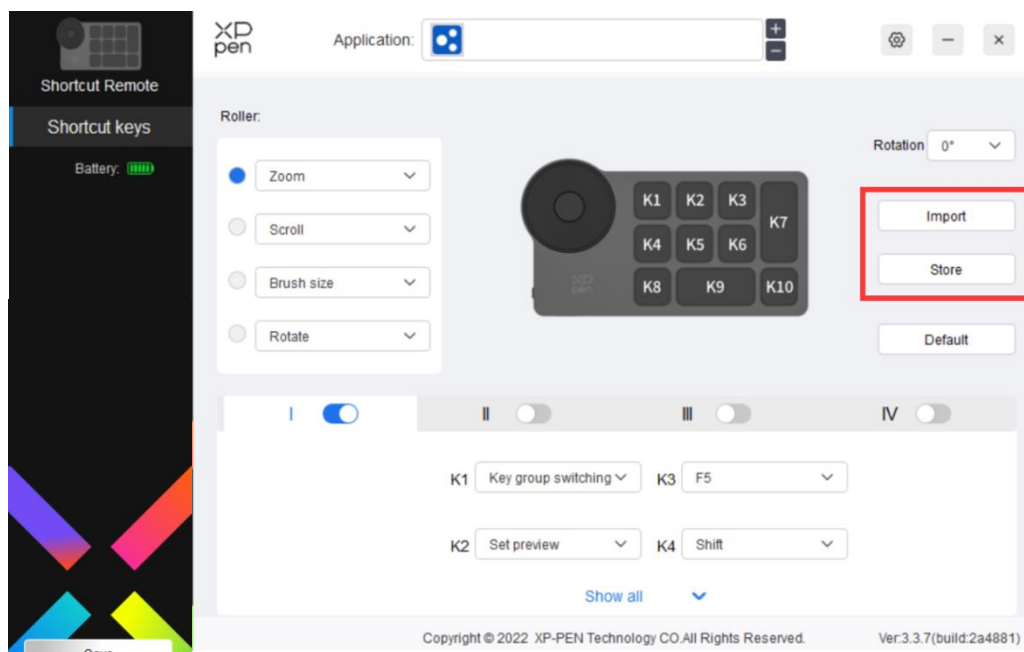

be displayed on top left corner of the driver.


Multiple devices can be connected at the same time, and up to three devices are supported. After switching one of the devices, the settings can be customized for the current device, and the settings only work for the currently selected device.

Application

Customize the functions of the device under the application.

For example, if you select an application and change the configuration, the changes will only be effective when using the application. When switching between different applications, the driver will automatically recognize. When the first application is selected, it will apply to other uncustomized applications.


You can add up to 7 applications.

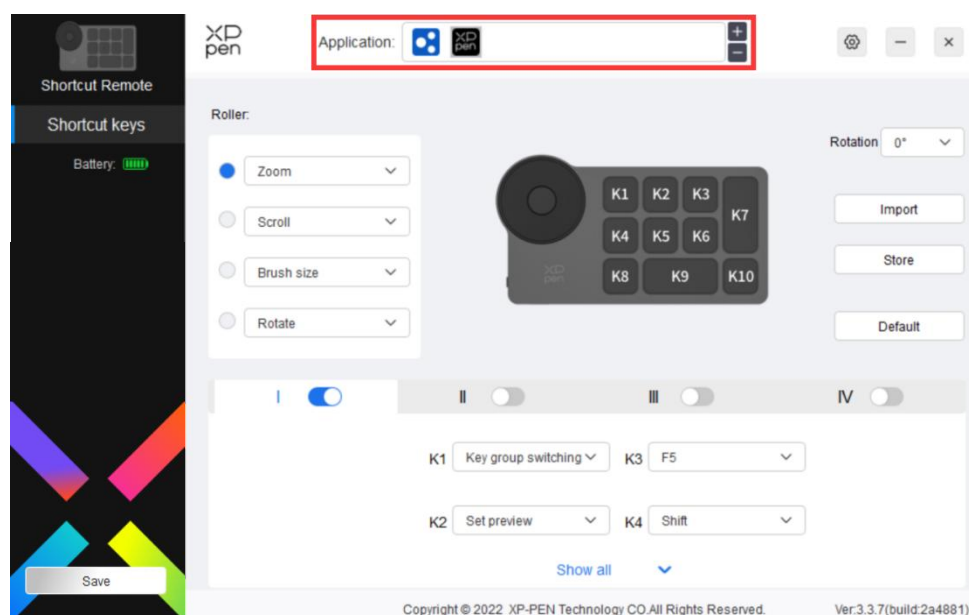

1. Click the "+" on the top right of the application bar to open the application selection interface.
2. Select application to be added from the opened applications or click the "browse" button to add from the installed applications.
3. Click "OK" and the selected application will be added to the application bar.

Roller

Through the key in the middle of the roller, you can switch between the functional groups of the roller.

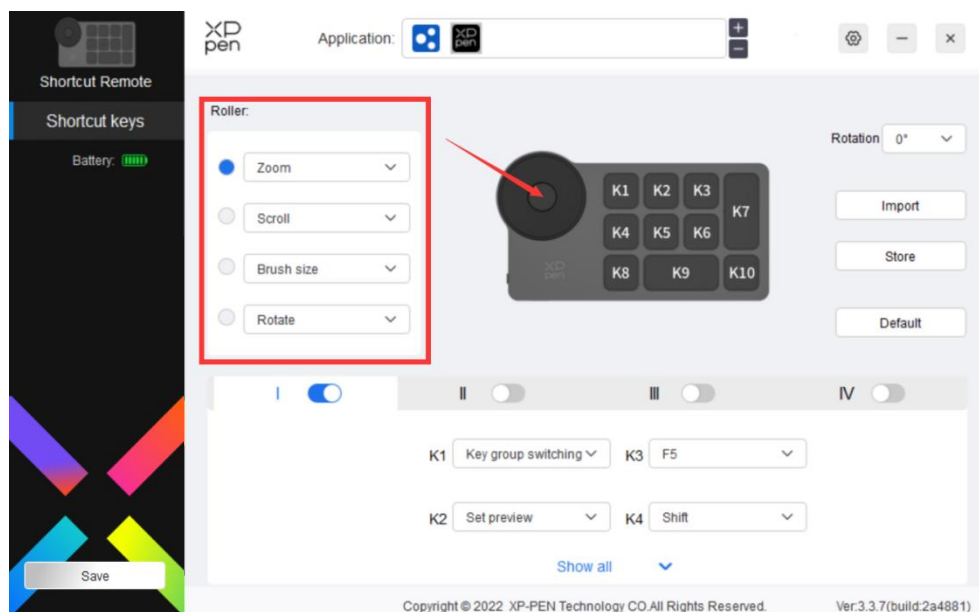

Customized:

Select "Customized" in the drop-down menu, and enter the keys or key combinations through the keyboard to define the clockwise and counterclockwise functions of the roller.

Roller shortcut settings


↻	Ctrl+Up	Clear
↺	Ctrl+Down	Delete

☒ Customised name

Ctrl+Up, Ctrl+Down

Cancel OK

Import/Store

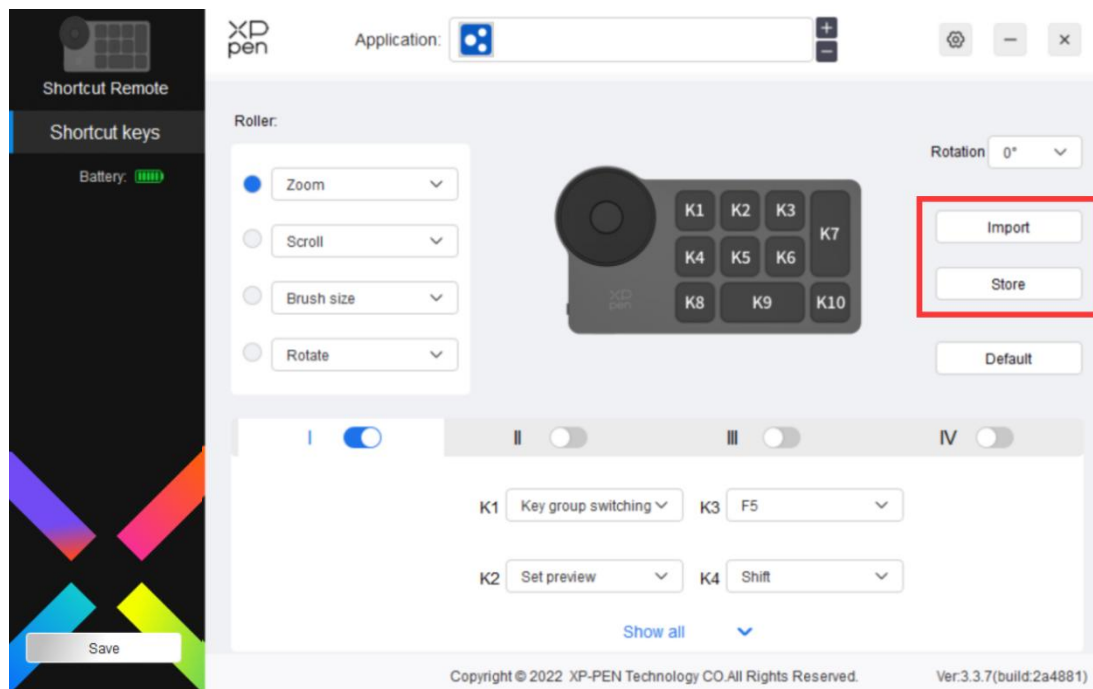

Import:

Import the configuration stored in the device into the driver of the selected application.


Store:

Store the configuration under the currently selected application to the device.


Note: please use the "Import" and "Store" functions in the case of wired connection. The configuration of "Import" and "Store" does not include the rotation information, and is only valid under the same system.

Shortcut keys

The driver provides four groups of shortcut keys. The first group of shortcut keys is enabled by default. Each group of keys can customize different functions. After enabling, you can switch between the opened groups through "key group switching" (the default is K1 key, which can be customized as other keys).

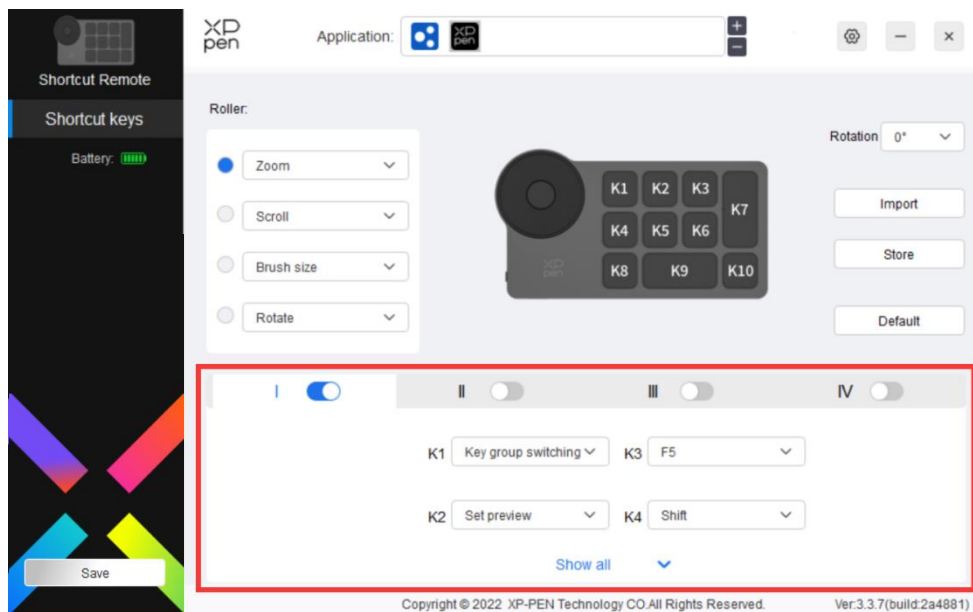

Set preview:

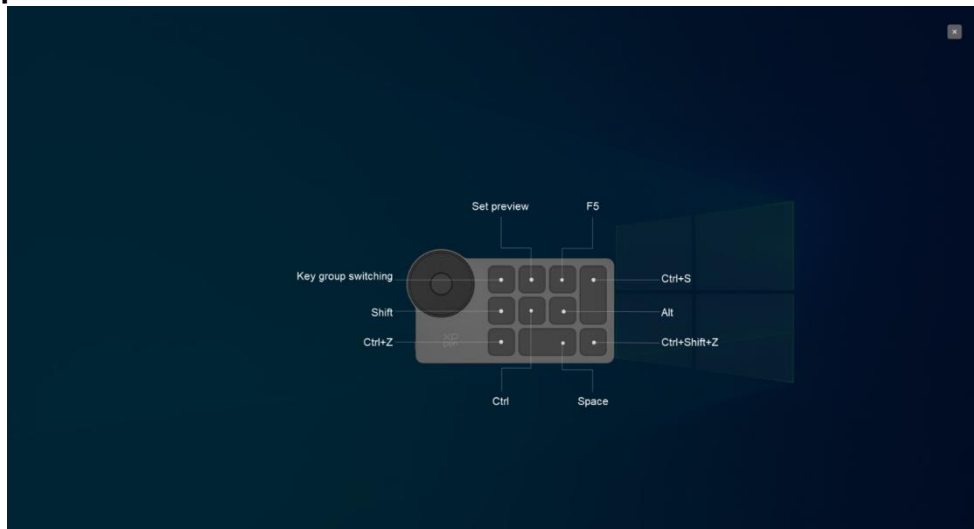

View the key function of the currently selected group, and the currently selected group must be on, click the close button on the upper right to close the window.

Customize:

Select "Customize" in the drop-down menu to customize the function of each key, and select "Mouse control" or "Keyboard" in "Customize" to customize the key combination.

Mouse control:


Set the key combination of mouse and keyboard. With the "Shift" and "Left Click" selected, the shortcut actions can be enabled in application that supports such key combinations.

Windows (Command): Add a combination key with system key. For example, when you need to type Win (Cmd) +left, press left and the drive will automatically bring the system key.

Other:

Precision mode: Limit the device's work area to a certain area. This function may allow you to create more detailed drawings.

Settings

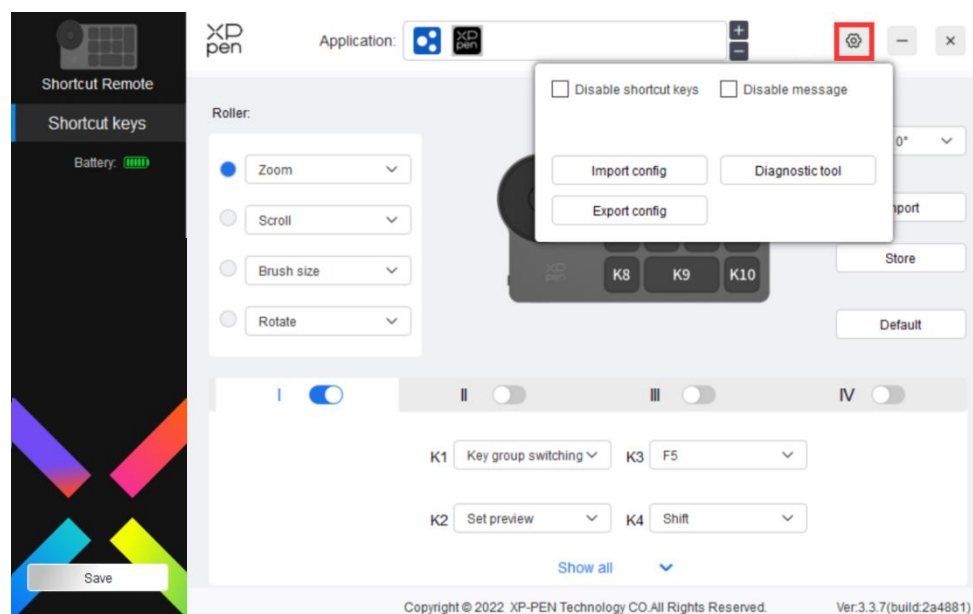

Disable shortcut keys:

Close the functions and key status prompts of all keys on the device.

Disable message:

When the key is pressed, the key status prompt will not be displayed at the bottom of the screen.

Diagnostic tool:

If there is any problem while using the driver, you can use a diagnostic tool.

Import & export configuration:

Read or store the set value of the set functions by way of Import & Export configuration.

Note:

When you need to import & export the changed functions, please click the "Save" button on the left side of the driver interface first to save the

configuration.

Driver uninstallation

Windows:

Open [Settings] → [Apps] → [Apps & features] in the start menu, find "Pentablet", click and select "Uninstall", and follow the prompts.

Mac:

In [Go] → [Applications], find "XP-PenPentabletpro", click "UninstallPentablet", and follow the prompts.

Linux:

Deb: Enter "sudo dpkg -r xp-pen-pentablet" in the terminal window and execute the command.

Rpm: Enter "sudo rpm -e xp-pen-pentablet" in the terminal window and execute the command.

Tar.gz: Please unzip it first, then enter "sudo" in the terminal window, drag "uninstall.sh" into it and execute command.

Notes:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

If you need any further assistance, please contact us at:

Website: www.xp-pen.com

Email: service@xp-pen.com